
HELP for Configurator Sio2SD

Project by Jakub Kruszona-Zawadzki
firmware and pcb (c) 2007-2011
Configurator by Pajero/MadTeam (c) 2011

!=shift ^=control !^=shift+control

1. BROWSING

SPACE or JOY↓ = page down selection
!SPACE or JOY↑ = page up selection
^Q = home (first slot)
^Z = end (last slot)
↔ = move files selection
JOY↔ = move files selection
!^ ↔ = scroll files screen
^ ↔ = scroll drives screen
! ↔↕ = mode "M" as mapping drives
! ↔ = mode "v" as -/+10 virtuals

2. READING FILES

RETURN long = set to D1 & ColdStart
RETURN (on dir) = enter to dir and read
ESC = updir and read
^ESC = root dir and read
LOGO = rewind dir and read
TAB = on/off read
!+.... = ...to back read
^V = read all drives Vn

3. CHANGE MODE

^T = mode: Lcd/Mapping/Virtual
CAPS = on/off tracking read

4. MAPPING FILES

1-8 = set drive 1-8
A-0 = set drive 1-15
!+... = unset as -OFF-
^+... = set at virtual drive
!Delete = undo last mapping
^Y = change sing: 1-8 <-> A-H
!^Clear = rebuilding test all drive

5. SELECT/EDIT MASK

↕ = select mask 0 to 9
^↕ = edition mask:
!DELETE = clear text
ESC = escape
RETURN = only setup mask
LOGO or TAB (+shift)= setup and read

```
6. SWAP MODE
^S = swap, select two drives:
    1-8 or A-0 = mark drive
    ESC = escape
plus all browsing keys...

7. FAVORITE/LAST USED
!; = add to favorite list
; = enter to list:
    ^P = on/off favorite
    ^CLEAR = clear if not favorite
    ESC = escape
RETURN (on dir) = enter to dir and read
plus all mapping and browsing keys

8. FIND FILES OR DIRS
? = find equal set mask
!? = found,in file-goto his dir read

9. WORKING AT ATR
INSERT = create new empty ATR file:
!INSERT = make dir:
    ESC = escape
RETURN = only create/make
LOGO = create/make and read dir
!+..... = ...to back read
CLEAR = remove ATR (confirm Y/N)
^R = rename ATR

10. OTHERS
!^1 to !^4 = Sio2Sd number 1 to 4
X long = reboot, ColdStart
    ^X = save setup and exit to dos
    !^S = save setup
    HELP = listing this help
    !HELP = new listing help
-----end-----
```